

INTERLESS

by mySDAtv



Quick Start Guide

mySDAtv M20

TABLE OF CONTENTS

Welcome	1
Remote Control	2
Watching Programs	3
Adding/Removing Favorites	5
Resuming Programs	5
Searching for Programs	5
Live Streaming	6
Changing Settings	8
Change Preview Seconds	8
Change Language	8
Change How Programs Repeat	9
Change Sort Order in Screens	9
Import New and Downloaded Programs	9
Reset INTERLESS	10
Upgrade INTERLESS	10
Delete Programs	10
Safety Warnings	11

WELCOME

I would like to praise God for this tool in your hands and thank you for your purchase. I pray that the content in this box may be a blessing in your life.

I want to express my appreciation to 3ABN and the other ministries who have shared the thousands of programs contained on this device. Their generosity and love for others are deeply appreciated.


Finally, I want to thank 3ABN Australia for the distribution of this box in Asia and Pacific region. If you would like to share this box with someone else in the Pacific region, please contact them at interless@3abnaustralia.org.au, or anywhere else in the world support@mysdatv.org.

Moses Primo

CEO, mySDAtv



REMOTE CONTROL

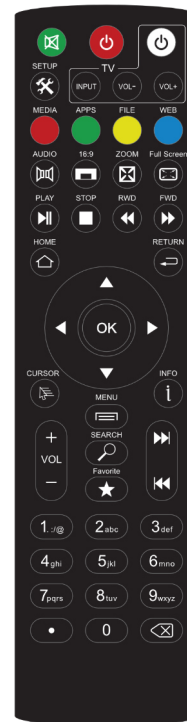

	Power on/off
	Mute
	System Settings (for Wi-Fi, display position, etc)
	Launcher
	Play Full screen
	Play program from start in <i>Watch/Search/Favorites screens</i> Play/Pause in <i>full screen</i>
	Stop current program in <i>full screen</i>
	Rewind current program by one minute in <i>full screen</i>
	Fast forward current program by one minute in <i>full screen</i>
	Return to previous screen
	Show program info in <i>full screen</i> Open INTERLESS Settings in <i>main menu</i> Main Menu/Watch/Search/Favorites/Settings: Press to navigate Left/Right/Up/Down Press ok to confirm your choice
	Full screen: Press Up for previous/Down for next program Press Left to rewind/Right to fast forward by one minute
	Return to main menu
	Add/Remove selected program as a favorite in <i>Watch/Search/Favorites screens</i>
	Volume up
	Volume down
	Next Program in <i>full screen</i>
	Previous Program in <i>full screen</i>

WATCHING PROGRAMS



Figure 1: Main Screen

The simplest way to watch programs on INTERLESS is to use the [Watch screen](#), where you can choose from the extensive library of programs in INTERLESS, and filter by category.

NOTE: The [Favorites](#) and [Search screens](#) work the same as the [Watch screen](#), except that they only show favorites, or have an on-screen keyboard, respectively.

Step 1 – Go to the Watch screen:

- Select [Watch](#) from the [Main screen](#) (see Figure 1). This will display the screen shown in Figure 2.

Step 2 – Choose a category. If you want to watch programs in a particular category:

- Press the left arrow on the remote to select the [Category drop-down list](#).
- Use the up and down arrows to move the highlight to the category that you want.
- Press the [OK](#) button on the remote to select the category.

Step 3 – Choose a program:

- Use the up and down arrows on the remote to move the highlight to a program that you would like to watch.

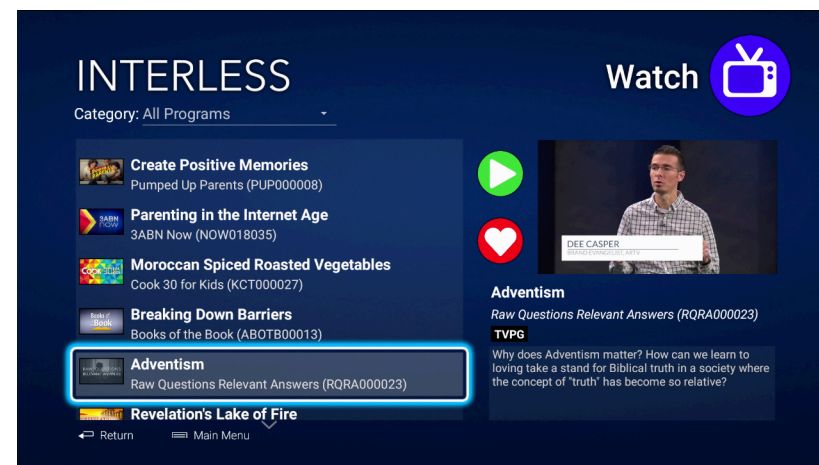


Figure 2: Watch Screen

Step 4 – Play the program:

Preview the program:

- Press [OK](#) on the remote. The program will go full screen automatically after the number of seconds specified in the [Settings screen](#) (see Figure 8).

Or to play the program in full screen:

- Press the right arrow to move the highlight to the green [Play](#) button and press [OK](#); or
- Press [Full Screen](#) on the remote, or [Play/Pause](#) to play the program from the start.

Step 5 – Find out about the program you're watching. When in full screen mode:

- Press [Info](#) on the remote to show the info bar.
- Press it again to dismiss the info bar.

Step 6 – Fast forward or Rewind:

- Press the left arrow to rewind, or the right arrow to fast forward by one (1) minute.

Step 7 – Go to the next or previous program:

- Press the up arrow to go to the previous program if within 10 seconds of the start of the program (after 10 seconds it will restart the current program), or the down arrow to go to the next program.

Step 8 – Stop playing. When you have finished watching programs:

- Press [Stop](#) on the remote.

ADDING/REMOVING FAVORITES


You may set individual programs as favorites. These are indicated on screen with the red Favorite icon on the program logo, as shown below in Figure 3.




Figure 3: Favorite Icon

A dedicated [Favorites screen](#) is accessible by selecting [Favorites](#) from the [Main screen](#) (see Figure 1).

Step 1 – Add or remove a favorite. On either the [Watch](#), [Search](#), or [Favorites screens](#):

- Use the arrows on the remote to highlight the red  [Favorite button](#).
- Press [OK](#) to toggle the favorite status of the program.

Or, while watching a program:

- Press  [Favorite](#) on the remote to toggle the favorite status of the program.

RESUMING PROGRAMS




If you are part-way through a program and need to stop, you can come back later to resume from where you left off. Resumable programs are indicated by the blue  Pause icon, as shown in Figure 4.





Figure 4: Pause Icon

Step 1 – Stop the program. While watching a program in [full screen](#):

- Press either  [Stop](#) or  [Return](#) on the remote.

NOTE: Only Favorites can be resumed. If the program you wish to resume is not yet a favorite, simply set it as a favorite before or after stopping it.

Step 2 – Resume/Play the program. At a later time, in the [Favorites screen](#), either:

- Press [OK](#) on the remote to start the preview;
- Press  [Full Screen](#) to play full screen from just before the point you stopped earlier; or
- Press  [Play/Pause](#) to play the program from the beginning.

SEARCHING FOR PROGRAMS

You may search for programs in INTERLESS by using the [Search screen](#) (Figure 5). Search according to name of series, program, or participants, as well as description.

Step 1 – Go to the Search screen:

- Select [Search](#) from the [Main screen](#) (see Figure 1).

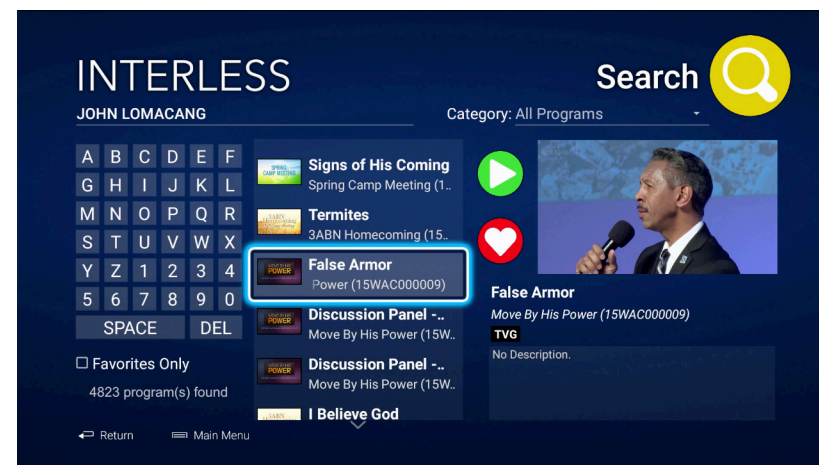 


Figure 5: Search Screen

Step 2 – Enter the search parameters:

- Use the arrows on the remote to navigate around the on-screen keyboard, and press [OK](#) to select a letter/number/space/delete.

NOTE: Long-pressing [OK](#) on some letters, such as vowels and some consonants, will display a menu of accented characters from which you may choose.

Step 3 – Filter by Favorites:

- Select the [Favorites Only](#) check box to filter by favorites only.

Step 4 – Filter by Category:

- Select the category from the [Category drop-down](#) list at the top of the screen.

LIVE STREAMING

If you have connected your mySDAtv set-top box to the Internet (see the [mySDAtv User Guide](#) for information), you can use the [mySDAtv](#) app to stream SDA TV channels, as well as download new programs from 3ABN.

Step 1 – Start streaming:

- Select [Streaming](#) from the [Main screen](#) (see Figure 1).
- Select [Proceed](#) when prompted.

The [mySDAtv](#) screen will appear (see Figure 6). Select any of the channels to watch the live streams.



Figure 6: mySDAtv

Step 2 – Return to INTERLESS:

- Select the *INTERLESS* icon in the *mySDAtv* main screen; or
- Press *Home* on the remote and select *INTERLESS* from the *Launcher* (see Figure 7).



Figure 7: Launcher

CHANGING SETTINGS

Figure 8: Settings Screen

There are various settings and operations that may be performed from the *Settings screen* (see Figure 8). These are detailed in the subsections that follow.

CHANGE PREVIEW SECONDS

You can change the number of seconds that elapse before a preview goes full screen in the *Watch*, *Search*, and *Favorites screens*.

Step 1 – Go to settings

- Select *Settings* from the *Main screen* (see Figure 1).

Step 2 – Change Preview Seconds

- Using the numbers and *Delete* on the remote, enter in the number of seconds.

Step 3 – Save settings

- Select the *Save* button and then *Proceed* when prompted.

CHANGE LANGUAGE

You may change the INTERLESS interface language. Included languages are: English, French, Spanish, Portuguese, Russian, Swahili, and Tagalog.

NOTE: This will only change the language of the interface, not the language of the installed programs.

Step 1 – Go to settings

- Select [Settings](#) from the [Main screen](#) (see Figure 1).

Step 2 – Change the language

- Select the [Language drop-down menu](#).
- Choose the language from the list.

Step 3 – Save settings

- Select the [Save](#) button and then [Proceed](#) when prompted.

CHANGE HOW PROGRAMS REPEAT

It is possible to play a single program on repeat, or all programs on repeat.

Step 1 – Go to settings

- Select [Settings](#) from the [Main screen](#) (see Figure 1).

Step 2 – Change the repeat type

- Select the [Repeat drop-down menu](#).
- Choose from [One](#) or [All](#).

Step 3 – Save settings

- Select the [Save](#) button and then [Proceed](#) when prompted.

CHANGE SORT ORDER IN SCREENS

By default, programs are listed in random order in the [Watch](#) and [Favorites screens](#), and by program code in the [Search screen](#). This allows you to watch programs randomly, or list by series, respectively.

Step 1 – Go to settings

- Select [Settings](#) from the [Main screen](#) (see Figure 1).

Step 2 – Change the sort order. [Order by](#) for [Watch](#) and [Favorites](#); [Search Order by](#) for [Search](#):

- Select the appropriate drop-down menu.
- Choose from [Random](#), [Name](#), [Program code](#), or [Category](#).

Step 3 – Save settings

- Select the [Save](#) button and then [Proceed](#) when prompted.

IMPORT NEW AND DOWNLOADED PROGRAMS

New programs can be imported into INTERLESS, provided there is enough space to install them (to delete programs, please see the relevant section later in this guide). They may be sourced from [mySDAtv](#) app downloads, or USB flash drives periodically available from mySDAtv. Imported programs are installed into the [Imported](#) category.

Step 1 – Go to settings

- Select [Settings](#) from the [Main screen](#) (see Figure 1).

Step 2 – Import downloads

- Select the [Import](#) button and then [Proceed](#) when prompted.

RESET INTERLESS

INTERLESS settings and logs may be reset, as well as re-installing programs.

NOTE: Resetting INTERLESS will not delete imported programs by default. You must select the [Delete imported programs](#) check box in the dialog box presented in step 2. See the relevant section later in this guide for information about how to delete individual programs.

Step 1 – Go to settings

- Select [Settings](#) from the [Main screen](#) (see Figure 1).

Step 2 – Reset INTERLESS

- Select the [Reset](#) button and then [Proceed](#) when prompted.

UPGRADE INTERLESS

INTERLESS software may be upgraded if a new version is available. INTERLESS will prompt you when it starts if it has an Internet connection and an update is available, or an INTERLESS Update USB flash drive/SD card is attached. You may also manually check for updates.


NOTE: An Internet connection or INTERLESS Update USB flash drive/SD card is **REQUIRED** for updates.

Step 1 – Go to settings

- Select [Settings](#) from the [Main screen](#) (see Figure 1).

Step 2 – Update INTERLESS

- Select the [Update](#) button and then [Proceed](#) when prompted.

If no update is available, or INTERLESS is not connected to the Internet, a message will appear telling you so. Press  [Return](#) on the remote to return to the [Settings screen](#).

DELETE PROGRAMS

It is possible to delete imported or previously-watched programs.

Step 1 – Go to the Watch screen:

- Select [Watch](#) from the [Main screen](#) (see Figure 1). This will show the screen in Figure 2.

Step 2 – Select a program and delete it:

- Use the arrows on the remote to highlight a program that you want to delete.
- Press and hold **OK** for one (1) second to show the pop-up menu (see Figure 9).
- Select **Delete Program** and then **Proceed** when prompted.

NOTE: Only programs that have been either watched or imported have the option to be deleted.

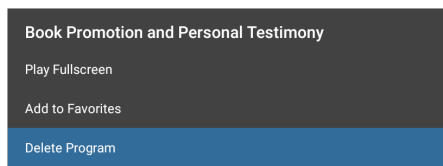 


Figure 9: Program pop-up menu

SAFETY WARNINGS

- Do not drop unit
- Do not move unit while operating
- Do not remove internal memory from unit
- Do not submerge unit in water
- Do not leave unit in direct sunlight
- Do not let children touch or operate with the unit without adult supervision
- Do not use unit within 8 inches (20 cm) of body
- Keep unit away from magnets
- Keep unit away from chemicals
- Keep unit away from heat sources
- Ensure the unit has enough ventilation so that it does not overheat
- Turn off the unit with the remote when you have finished using it
- **Do not open unit; it is not user serviceable in the field. Opening the lid under the unit will void the warranty. For support in Asia/Pacific call 3ABN Australia on +61 2 4973 3456 or email interless@3abnaustralia.org.au. Otherwise call mySDAtv at +1 (618) 627-2300 or email support@mysdatv.com.**